

All Events Rental

Chocolate Fountain

How to use our chocolate fountain:

The chocolate fountain comes with a dishpan, spatula, and plastic wrap for clean-up.

Operating tips:

- Only plug the fountain into a grounded outlet of appropriate volts and amps.
- The fountain requires at least 7 pounds of chocolate for proper operation.

Setup:

1. Place the fountain on a stable, level surface, such as a table or counter. If you aren't getting an even flow around the fountain, it means you aren't level. Adjust the fountain's feet if necessary to make it level.
2. Make sure to set the fountain near a grounded electrical source so that you will not need an extension cord.
3. Make sure there is at least ¼" of clearance under the fountain to allow enough airflow.

Instructions:

1. Plug the fountain in, turn the power switch to PRE-HEAT and set the temperature control knob to 100°.
2. Pre-melt the chocolate in a microwave on low for 45 seconds. After 45 seconds, take the chocolate out and stir with a spatula (for tub chocolate) or knead with your hands (for bag chocolate). Repeat this process until the chocolate is a smooth consistency.
3. Carefully pour the melted chocolate into the base of the fountain.
4. Turn the power switch to HEAT+MOTOR and set the temperature control knob to 125°.
5. Fill the base as needed with additional melted chocolate to maintain an even flow and enjoy!

Cleaning:

1. Turn the temperature control knob to its lowest setting, turn the power switch to OFF and unplug the fountain.
2. Wrap the base of the fountain, just below the lip, with plastic wrap. This is to help prevent chocolate or water from entering the air holes.
3. Scrape the tiers with a spatula, pushing the chocolate down into the base.
4. Remove the auger, crown, tiers and central tower.
5. Scoop any remaining chocolate out of the base and into a zip-top bag for use later or into the trash. Do not pour the chocolate down the drain!
6. Use paper towels to remove any remaining chocolate from the base.
7. Hand wash the auger, crown, tiers, tower, and base with warm sudsy water.
 - Do not immerse the base in water!
8. Dry thoroughly.
9. Remove the plastic wrap, reassemble the tiers, and return to the case.

