

# All Events Rental

## Coffee Maker

### How to use our coffee maker:

#### Operating tips:

- Only plug the coffee maker into a grounded outlet of appropriate volts and amps.
- Fill the coffee maker to the desired level with COLD water.
- Never immerse the coffee maker in water.
- After brewing, remove the grounds basket to keep the coffee warm without increasing the coffee's strength.



#### Setup:

1. Place the coffee maker on a stable, level surface, such as a table or counter.
2. Set the coffee maker near a grounded electrical source, so that you will not need to use an extension cord.

#### Instructions:

1. Fill the basin to the desired level with cold water, making sure the percolator tube stays in place.
2. Insert the grounds basket down over the percolator tube and fill with the appropriate amount of grounds.
3. Plug the coffee maker in.
4. Expect brewing the take approximately one minute for every cup you are making. Allow for more or less time for stronger or weaker coffees, respectively.

#### Coffee Equivalents:

Cups of Brewed Coffee	Coffee Grounds
30	2 Cups
55	3½ cups
100	6 Cups

- One pound of coffee is equal to 4¾ cups.

#### Cleaning:

1. Unplug the coffee maker.
2. Thoroughly rinse the coffee maker by filling the basin with water and draining it through the dispenser nozzle.
3. Dump the used grounds in the trash and rinse the basket under warm running water.
4. Dry thoroughly.