

All Events Rental

Popcorn Machine Cart

How to use our popcorn machine:

Operating tips:

- Only plug the popcorn machine into a grounded outlet of appropriate volts and amps.
- Avoid serious burns! Do not touch the kettle while it is hot!
- Do not cover the air vent holes on the side of the machine!

Setup:

1. Make sure to position the popcorn machine near a grounded electrical source so that you will not have to use an extension cord.
2. There are two switches:
 - Power Switch: Turns main power on as well as the heat lamp and warmer plate.
 - Kettle Switch: Turns the rotating kettle motor and heating element on – Required to pop corn!



Instructions:

1. Plug the popcorn machine in, flip the Power Switch and Kettle Switch to ON.
 - Before the first batch, allow the cold kettle to warm up for 4-6 minutes.
2. Cut the top off a Naks-Pak corn and oil package, raise the kettle lid, and squeeze the Naks-Pak into the kettle.
3. When popping has slowed to less than one every 10 seconds, rotate the handle to empty the kettle; return the kettle to the upright position.
4. Repeat steps 1-3.
5. Turn off the Kettle Switch once you have dumped the final batch.
6. Once you are done serving popcorn, turn off the Power Switch.
7. At this point, both switches should be off.

Cleaning:

1. Allow the kettle to cool until just warm enough to handle; unplug the kettle and remove from the machine.
2. Wipe the kettle, kettle lids, crossbar, and exterior clean with a wet wash cloth.
 - Do not immerse the kettle in water!
3. Remove popped corn and pack in bags.
4. Remove the “old maid” pan, empty the kernels and wipe clean.
5. Wipe the interior of machine with a warm wash cloth, paying special attention to the windows.
6. Wipe the cart with a warm wash cloth, paying special attention to the platform.