

# All Events Rental

## Sno-Kone Machine

### How to use our sno-kone machine:

The Sno-Kone machine includes a 110 volt, single phase, 60 cycle AC motor with toggle switch, shaving unit, and light switch inside the case. A cutter head is mounted on the end of the motor shaft inside the shaver body (goose-neck). The pusher handle presses the ice against the revolving cutter head to produce the shaved ice.

### Operating tips:

- Only plug the sno-kone into a grounded outlet of appropriate volts and amps.
- The machine must be properly grounded to prevent electrical shock.
- The larger the ice the better the snow.
- A motor surface temperature of 150° during use is normal.
- Put only ice in the goose-neck to prevent damage to the blades.
- Keep fingers away from the shaver body while the motor is running.

### Setup:

1. Place the sno-kone machine on a stable, level surface, such as a table or counter.
2. Make sure to set sno-kone machine near a grounded electrical source so that you will not have to use an extension cord.

### Instructions:

1. Plug the machine in, flip the light switch to ON.
2. Fill the goose-neck to within a inch of the top with ice.
3. Simultaneously press the red motor button and swing the pusher handle down to press the ice into the cutter head.
  - Use firm pressure. Too much = coarse snow. Too little = mushy snow.
  - Do NOT force the handle.
4. Once you have a pile of snow, use the included spoon to scoop the snow into cones.
5. Apply 1-2 squirts of flavor per cone.
6. Eat and repeat.

### Cleaning:

1. Unplug the machine.
2. Wipe all surfaces with a warm wash cloth.
3. Dry thoroughly.

